

**tissin**

**Electro-Pneumatic Positioner**

**TS600 Series**

**Instruction Manual**



Ver. PM-TS600EN-03/2023

## Table of Contents

<b>1</b>	<b>Introduction</b>	4
1.1	General information for the user	4
1.2	Requirement for safety	5
1.3	Basic safety instructions for use in Ex area	6
1.4	Conditions to maintain intrinsic safety (Ex i)	6
1.5	Certificate	7
<b>2</b>	<b>Description of Products</b>	8
2.1	Function	8
2.2	Features	8
2.3	Options	8
2.4	Applications	8
2.5	Label	9
2.6	Product Code	12
2.7	Specification	13
2.7.1	Positioner	13
2.7.2	Position transmitter(Option)	13
2.7.3	Limit Switch(Option)	14
2.8	Operation logic	15
2.9	Parts and Assembly	16
2.9.1	Standard type	16
2.9.2	With Position transmitter type	17
2.10	Dimension drawings	18
2.10.1	TS600L Dimensions	18
2.10.2	TS600R Dimensions	20
<b>3</b>	<b>Installation</b>	22
3.1	Safety	22
3.2	TS600L installation	22
3.3	TS600R installation	24

3.3.1 Fork lever type-----	24
3.3.2 NAMUR Type-----	24
<b>4 Air connection-----</b>	<b>25</b>
4.1 Notice-----	25
4.2 TS600L air connection-----	25
4.3 TS600L RA/DA action setting-----	25
4.4 TS600R air connection-----	26
4.5 TS600R RA/DA action setting-----	26
<b>5 Power connection-----</b>	<b>27</b>
5.1 Flame proof type power connection-----	27
5.2 Intrinsically safe type power connection-----	29
5.3 With Position transmitter-----	30
5.4 With Limit switch-----	31
5.5 With Position transmitter and Limit switch-----	31
<b>6 Adjustment-----</b>	<b>32</b>
6.1 Zero and Span Adjustment-----	32
6.2 Position transmitter Setting(Option)-----	33
<b>7 Troubleshooting-----</b>	<b>34</b>
7.1 Common problems-----	34
7.2 Install orifice-----	34
7.3 Adjust Potentiometer gear-----	35
7.4 Other problems and resolution-----	36
<b>8 Limited warranty and disclaimer -----</b>	<b>37</b>

# 1 Introduction

## 1.1 General information for the user

This instruction includes installation, operation, maintenance, and parts information for Tissin TS600 Valve Positioner. Keep these instructions in a location which is easily accessible to every user and make these instructions available to every new owner of the device.□

- Installation, commissioning and maintenance of the product may only be performed by trained specialist personnel who have been authorized by the plant operator to do so.
- To avoid possible injury to personnel or damage to valve parts, WARNING, CAUTION and NOTICE should be strictly followed.
- Before installing or commissioning, be sure to read and thoroughly understand the product manual and operate the product properly.
- Operators must strictly observe the applicable national regulations with regards to installation, function tests, repairs, and maintenance of electrical products.
- For additional information or if specific problems occur that are not discussed in these instructions, contact the manufacturer.

---

The manual can be altered or revised without any prior notice.  
Please visit our website (<http://www.tissin.co.kr> ) check the latest documentation.

## 1.2 Requirement for safety

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. These safety instructions are intended to prevent hazardous situations and/or equipment damage. For the safety, it is important to follow the instructions in the manual.



**WARNING** Failure to observe the warning may result in serious injuries or death.



**CAUTION** Failure to observe this warning may result in product failure or injuries.



**NOTICE** Failure to observe this warning may result in product failure or performance degradation.

---

### Safety notes



**CAUTION**

---

- Only trained and authorized person should operate machinery and equipment.
- Do not use this positioner out of the range of its specifications as this can cause failure.
- Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
- Before loosening the pneumatic lines and valves, turn off the pressure and vent the pneumatic lines.
- Before reaching into the device or the equipment, switch off the power supply and secure to prevent reactivation.
- Observe applicable accident prevention and safety regulations for electrical equipment.

---

### 1.3 Basic safety instructions for use in Ex area

To prevent the risk of explosion, observe not only the basic safety instructions in the respective operating instructions for operation in the Ex area, but also the following.

---

 **WARNING**

---

- Observe the applicable safety regulations (also national safety regulations) as well as the general rules of technology for construction and operation.
- Make sure that the device is suitable for the area of use.
- Check the positioner's certified and permitted explosion proof range.
- Close all unnecessary cable glands with lock screws approved for the explosions area.
- TS600 series has 2 conduit entries. Flameproof cable must be used for cable entry, and for unused cable entry, flameproof blind cable plug should be used.
- TS600 series is certified under flame proof (Ex db mb IIB/IIC T6/T5 Gb).  
Explosion proof zones 1 and 2.

---

### 1.4 Conditions to maintain intrinsic safety (Ex i)

---

 **WARNING**

---

- Connect the device with type of protection "Intrinsic safety" solely to an intrinsically safe circuit.
- Observe the specifications for the electrical data on the certificate and in technical data.
- TS600 series is certified under intrinsically safe (Ex ia IIC T6/T5 Gb).  
Explosion proof zones 0, 1 and 2.

---

#### Intrinsic safety explosion standard

Explosion regulations	IEC 60079-0:2017, IEC 60079-1:2014-06 IEC 60079-18:2017, IEC 60079-11:2011		
Explosion proof	Ex ia IIC T5/T6 Gb		
Barrier specifications	Ui	li	Pi
Main power	28V	101mA	707mW

## 1.5 Certificate

This product has obtained a variety of explosion-proof certification and safety level certification. For details, please visit our website and download the corresponding explosion-proof certificate for confirmation.

Certification	Certificate number	Explosion proof grade
 <b>IECEx</b>	IECEx EPS 18.0078X	Ex db mb IIB/IIC T6/T5 Gb Ex ia IIC T6/T5 Gb Ex tb IIIC T85°C/T100°C Db IP66
 <b>ATEX</b>	EPS 18 ATEX 1 156 X	II 2G Ex db mb IIB/IIC T6/T5 Gb II 2G Ex ia IIC T6/T5 Gb II 2D Ex tb IIIC T85°C/T100°C Db IP66
 <b>EAC</b>	RU C-KR.HA65.B.01513/22	1Ex d mb IIC T5/T6 Gb X 1Ex d mb IIB T5/T6 Gb X 0Ex ia IIC T5/T6 Ga X
 <b>KCS</b>	16-KA2BO-0353 16-KA2BO-0424	Ex dmb IIB T5/T6 Ex dmb IIC T5/T6
 <b>CCC</b>	2020322307000492	Ex db mb IIC/IIB T5/T6 Gb Ex ia IIC T5/T6 Gb Ex tb IIIC T85°C/T100°C Db
 <b>NEPSI</b>	GYJ21.1313X GYJ21.1314X	Ex db mb IIB T5/T6 Gb Ex db mb IIC T5/T6 Gb Ex tb IIIC T85°C/T100°C Db Ex ia IIC T5/T6 Gb
 <b>CSA</b>	Evaluation is in progress	CL I, DIV 2, GP ABCD; T5...T6 Ex db mb IIC T5...T6 Gb; Ex ib IIC T5...T6 Gb CL I, ZN 1 AEx db mb IIC T5...T6 Gb; AEx ib IIC T5...T6 Gb CL II, DIV 2, GP EFG; T100°C...T85°C ; CL III Ex tb IIIC T100°C...T85°C Db; Ex ib IIIC T100°C...T85°C Db ZN 21 AEx tb IIIC T100°C...T85°C Db; AEx ib IIIC T100°C...T85°C Db

## 2 Description of products

### 2.1 Function

Electro-Pneumatic valve positioner TS600 series controls the valve stroke in response to an input signal of 4~20mA DC from the control panel, DCS or calibrator.

### 2.2 Features

- Applied to various control valve system
- Fast response time, excellent stability and durability
- Simple zero and span adjustment
- IP 66 enclosure
- Easy maintenance due to built-in module type
- By-pass valve (A/M switch) installed
- Air connection part is designed for detachability and it can be changed PT/NPT tapping threads in the field easily

### 2.3 Options

- Position transmitter(4~20mA DC Feedback signal)
- Limit switch (Mechanical or Proximity type)


### 2.4 Applications

The TS600 is mounted on pneumatic control valves and is used for fluid control in industrial parts.


- Oil and gas
- Chemicals
- Power plant
- Paper
- Water treatment
- Pharmaceutical
- Printing and dyeing processing
- Food and beverage
- Etc.

## 2.5 Label


Item	Description
MODEL No.	Indicates model number.
SERIAL No.	Indicates serial number.
OPERATING TEMP	Indicates allowable operating temperature.
EXPLOSION PROOF	Indicates certified explosion proof grade.
AMBIENT TEMP.	Indicates explosion proof temperature. This temperature range must be observed when using in explosion-proof areas.
WEATHER PROOF	Indicates enclosure grade.
INPUT SIGNAL	Indicates input signal range.
SUPPLY PRESSURE	Indicates supply pressure range.

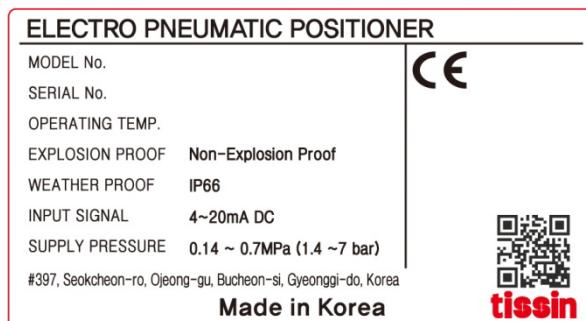

< For Non-explosion proof >

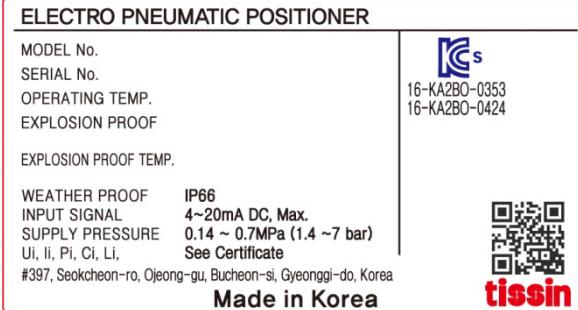

< For KCS approval >

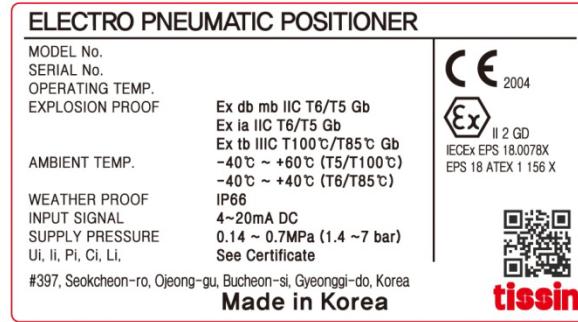


< For ATEX & IECEx approval >



< For NEPSI / CCC approval >



< For EAC approval >

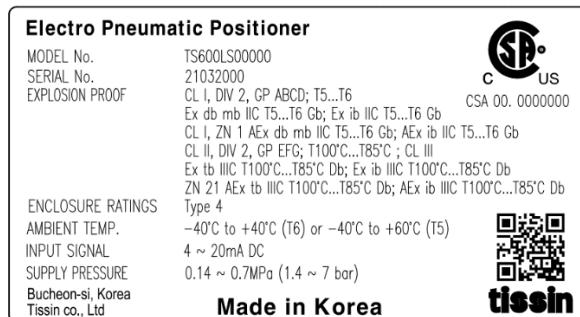

< For CSA approval >

## 2.6 Product Code

<b>Model</b>	TS600						
<b>Acting Type</b>	Linear Type	L					
	Rotary Type	R					
<b>Explosion proof type</b>	Non-Explosion type		N				
	KCs, NEPSI, CCC, EAC		B				
	KCs, NEPSI, CCC, EAC		C				
	NEPSI, CCC, EAC		A				
	ATEX & IECEx		X				
	CSA		S				
<b>Connection type</b>	<u>Conduit Entry</u>	<u>Air Connection</u>					
	G(PF)1/2	PT1/4	1				
	G(PF)1/2	NPT1/4	2				
	NPT1/2	NPT1/4	3				
	M20	NPT1/4	4				
	M20	G1/4	5				
<b>Linear lever type</b>	10~40mm		1				
	40~70mm		2				
	70~100mm		3				
	100~150mm		4				
<b>Rotary lever type</b>	M6 x 39L (Fork lever type)		1				
	NAMUR Type		5				
<b>Operating Temp.</b>	-20~70°C (Standard)			S			
	-20~120°C *			H			
	-40~70°C			L			
	-60~70°C (for EAC certificate)			U			
<b>Options*</b>	None		0				
	With Position transmitter (4~20mA)*		1				
	With Limit Switch *		2				
	With Limit Switch (Explosion proof type)		3				
	With Position transmitter and Limit Switch*		4				
	With Position transmitter and Limit Switch (Explosion proof type)		5				
	With external Limit switch mounting device		6				
	With Position transmitter and external Limit switch mounting device*		7				

**Note\***

1. High temperature (-20°C~120°C) positioner must be Non-explosion proof type.
2. Options number 1, 2, 4, 7 must be Non-explosion proof type.

## 2.7 Specification

### 2.7.1 Positioner

Model	TS600L		TS600R	
	Single	Double	Single	Double
Input signal	4~20mA DC			
Impedance	250±15Ω			
Supply pressure	0.14~0.7MPa			
Stroke	10~150mm		0~90°	
Air connection	PT(NPT) 1/4			
Gauge connection	PT(NPT) 1/8			
Conduit	G(PF) 1/2 or NPT 1/2			
Explosion proof type	Ex db mb IIB/IIC T6/T5 Gb Ex ia IIC T6/T5 Gb Ex tb IIIC T85°C/T100°C Db			
Degree of protection	IP66			
Ambient Temp.	Operating Temp.	-20°C ~ 70°C (Standard), -40°C ~ 70°C (Low Temp.), -20°C ~ 120°C (High Temp.)		
Temp.	Explosion proof Temp.	-40°C~60°C(T5/T100°C) / -40°C~40°C(T6/T85°C)		
Linearity	±1.0% F.S		±1.0% F.S	±2.0% F.S
Sensitivity	±0.2% F.S		±0.5% F.S	±0.5% F.S
Hysteresis	±1.0% F.S			
Repeatability	±0.5% F.S			
Air consumption	Below 2.5LPM (Sup=0.14MPa)			
Flow capacity	Over 80LPM (Sup=0.14MPa)			
Material	Aluminum die casting			
Weight	2.8kg			

### 2.7.2 Position transmitter (Option)


Item type	Specification
Input voltage	9~30V DC
Output current	4~20mA DC
Connection type	2 Wire Type
Impedance	Max.600Ω / 30V
Range of temperature	-40°C ~ 85°C
Linearity	±1%
Sensitivity	±0.2%
Hysteresis	1%

### 2.7.3 Limit Switch (Option)

Item type	Specification
Switch type	2 x SPDT
Degree of protection	IEC IP40
Rating (AC)	16A 1/2HP 125/250VAC
Rating (DC)	0.6A @ 125VDC, 0.3A @ 250VDC
Durability	Min. 100,000 @ 30 operation / min
Temperature rating	-25°C~80°C
Electric shock	Class I
Position Indicator	Open : Yellow , Close : Red

## 2.8 Operation Logic

The diaphragm valve moves downward. The movement of diaphragm valves acts on Feedback spring through Feedback lever and Flapper increases torque to the left pull. The diaphragm valve is balanced at the position between the above spring torque and magnetic field strength generated by the input current. Gain suppression spring is used to immediately feedback the movement of the Pilot Valve to the Flapper and it increases the loop\* stability.

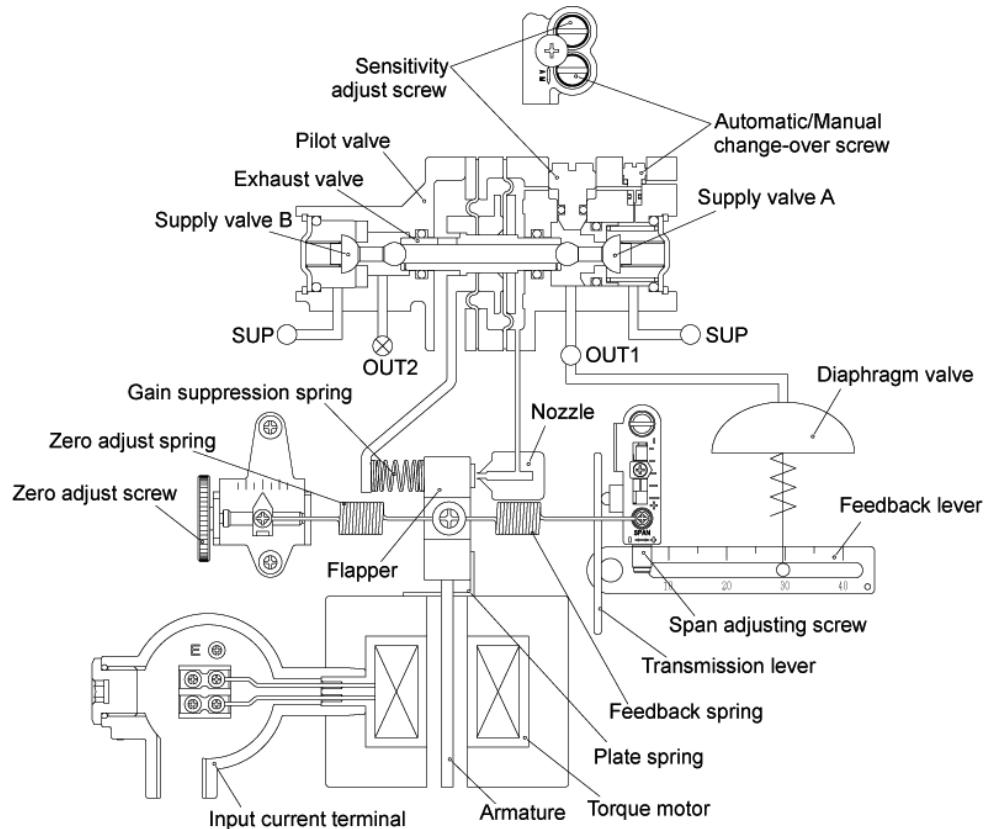


<TS600L Operation logic>


- \* The diagrams above explanations based on TS600L linear type and Diaphragm valve of RA (Reverse Action) type. TS600R rotary type is same as Operation logic of TS600L linear type except feedback structure.
- \* Nozzle back pressure internal pressure of Nozzle depends on the control the Nozzle by the Flapper.
- \* Loop Positioner and Control valve consist of closed-circuit through Feedback lever.

## 2.9 Parts and Assembly

### 2.9.1 Standard type

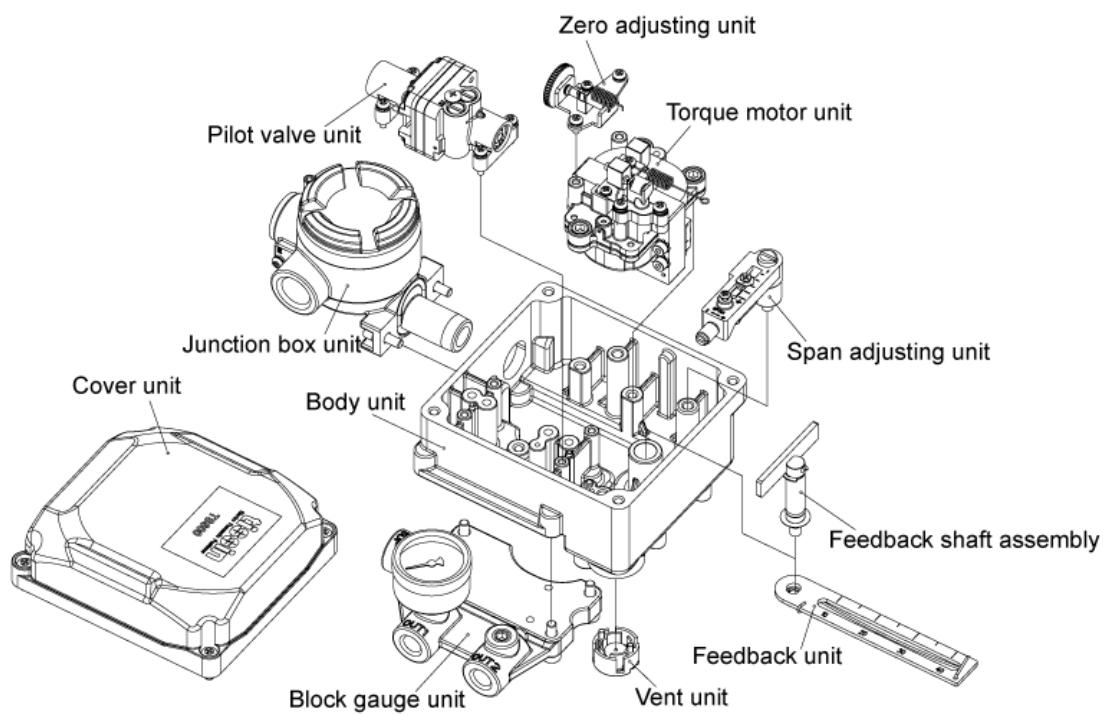


2.9.2 With Position transmitter type

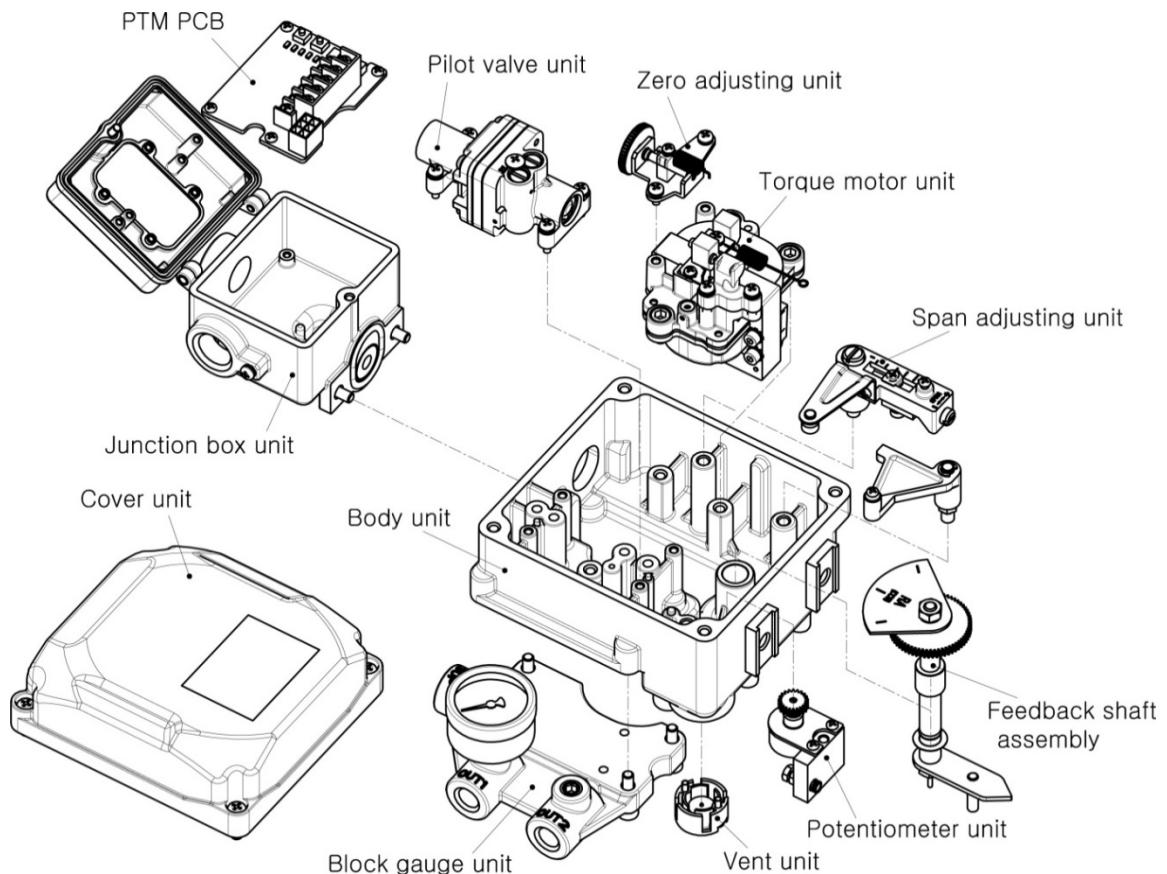


## 2.10 Dimension Drawings


### 2.10.1 TS600L Dimensions

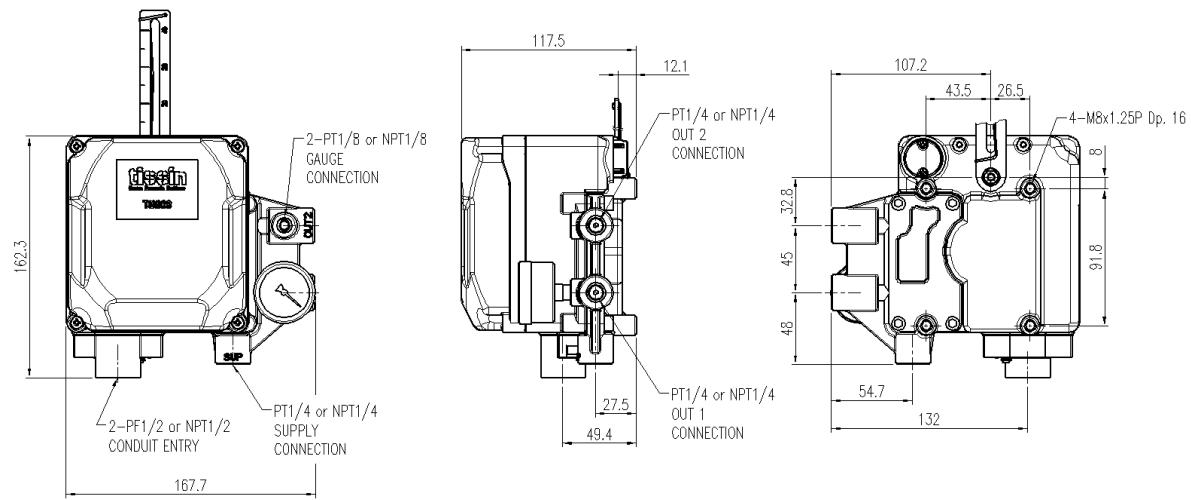

<TS600L Intrinsically safe type / Non-Explosion proof type Dimension>

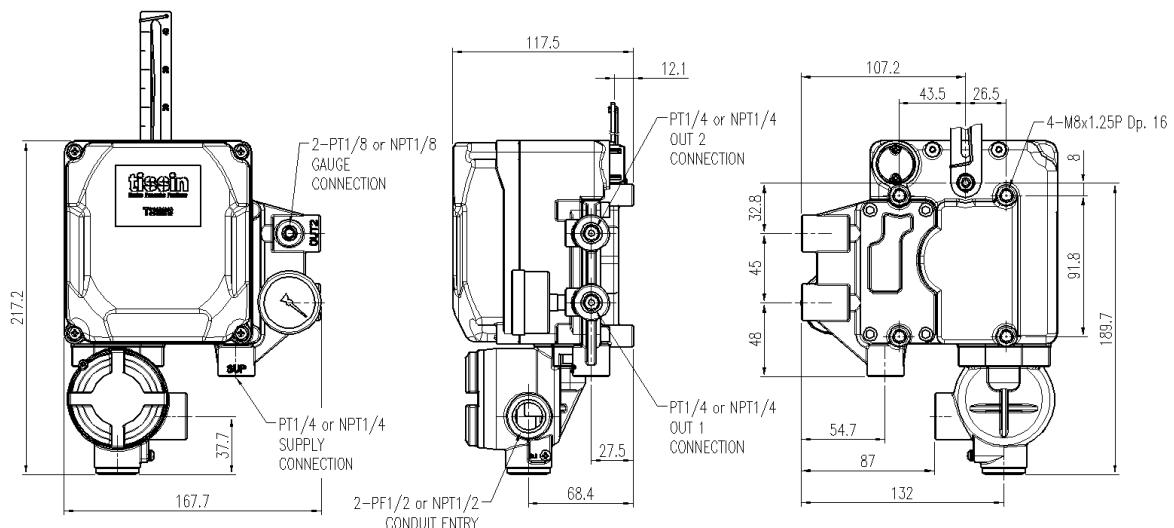


<TS600L Flame proof type / ATEX & IECEx type Dimension >

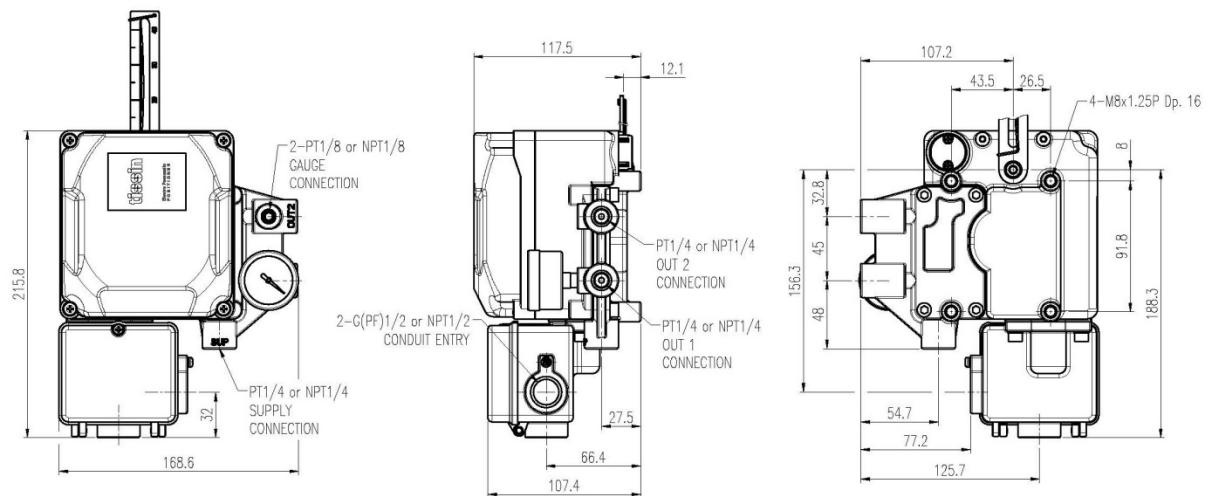


<TS600L with Position transmitter type Dimension>


**2.10.2 TS600R Dimensions**

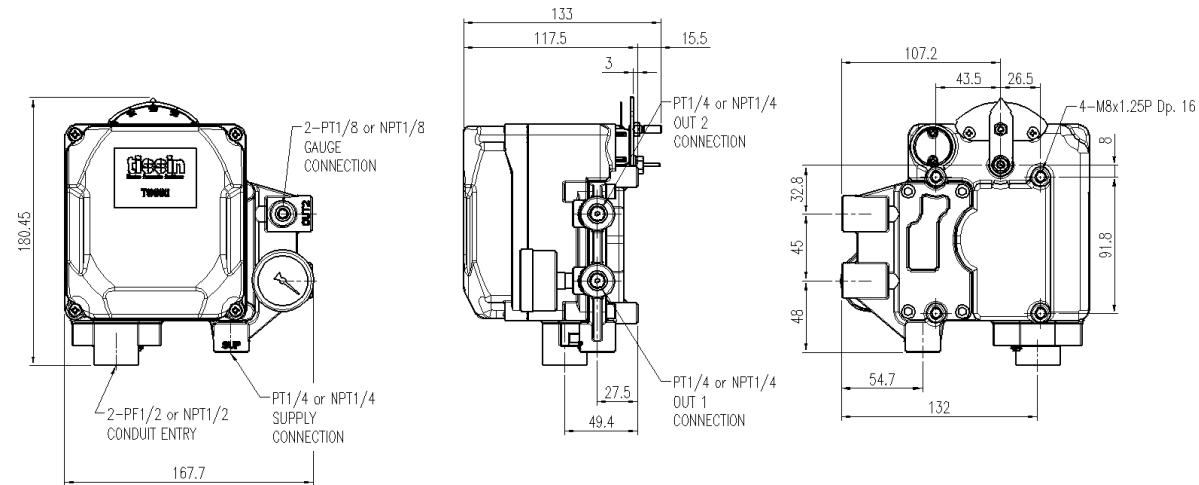


<TS600R Intrinsically safe type / Non-Expansion proof type Dimension>

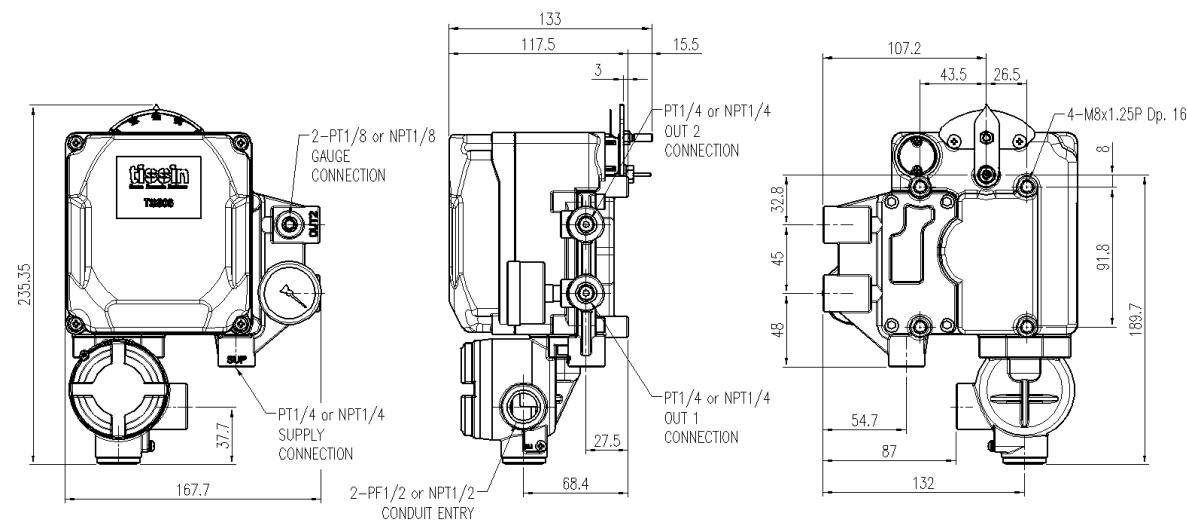

<TS600R Flame proof type / ATEX & IECEx type Dimension>

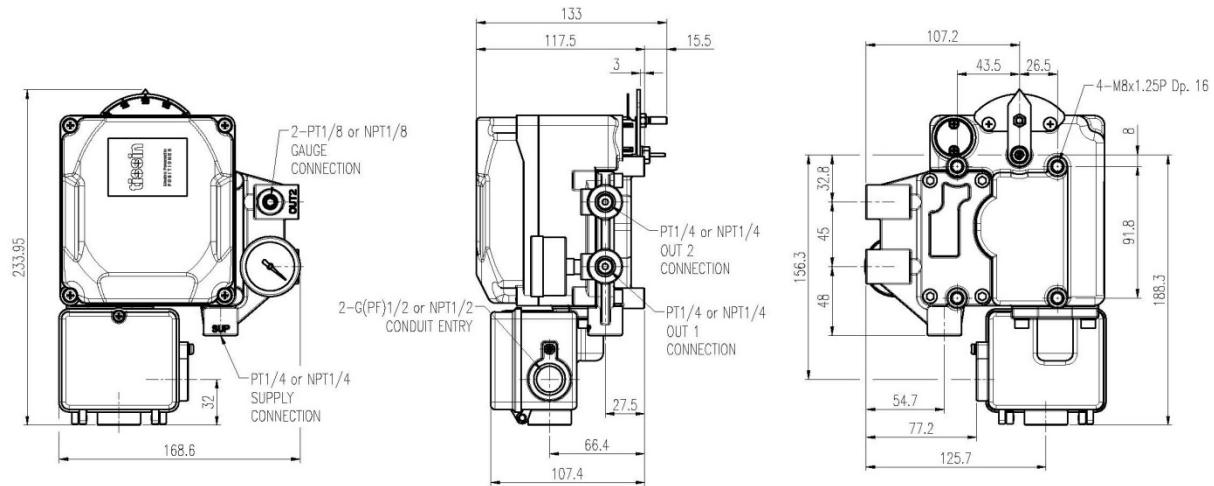

<TS600R with Position transmitter type Dimension>

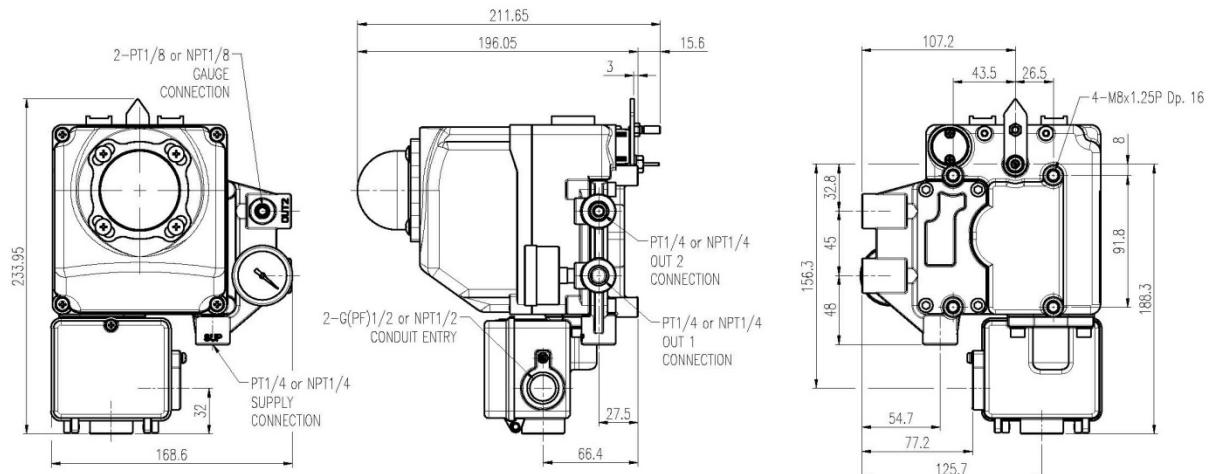

<TS600R with Limit switch type / with Position transmitter and Limit switch type Dimension>

## 3 Installation

### 3.1 Safety

#### **WARNING**

When installing a positioner, please ensure to read and follow safety instruction.


- Make a space needed for maintenance on the setting area.
- Cut supply pressure and release compressed air in positioner and actuator in advance.

### 3.2 TS600L Installation


#### **CAUTION**

Proper bracket must be made in order to adapt the positioner on the actuator yoke. Please consider following important points when a bracket is being designed.

- Check if feedback lever is parallel to the ground at 50% of the valve stroke. <Figure 1>
- Feedback lever connection with the pin of the actuator clamp should be installed in such a way that the valve stroke and numbers which indicated on the feedback lever must be fitted. <Figure2>

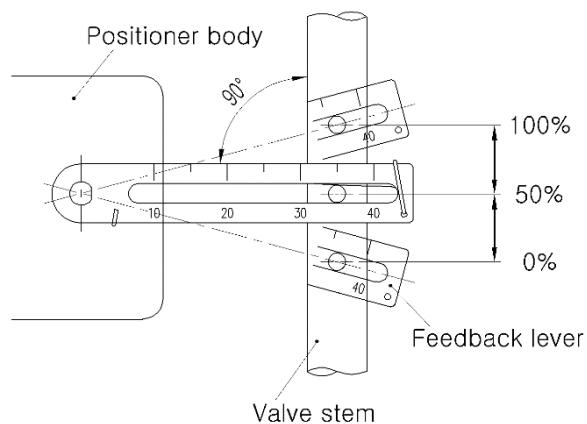


<Figure 1>

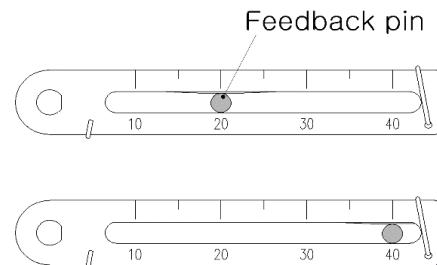

<Figure 2>

### TS600L bracket Installation

Assemble the positioner with the bracket made in previous step by fastening the bolts.  
Please refer to the backside of the positioner for size of the bolts. The standard bolt size is M8 x 1.25P.

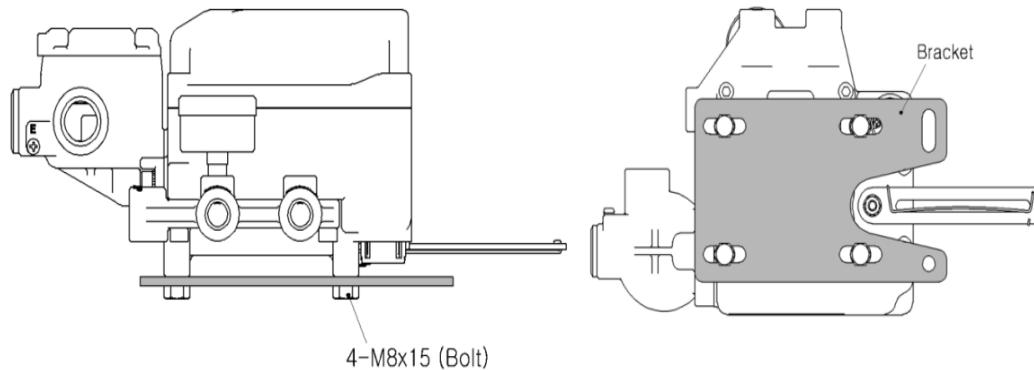

<TS600L Bracket Installation Example>


---

#### CAUTION

---

- After installing the positioner, operate the valve from 0% to 100% stroke by using direct air to the actuator (manual position). On both 0% and 100%, the feedback lever should not touch the lever stopper, which is located on the backside of the positioner.
- If the feedback lever touches the stopper, the positioner should be installed further away from the yoke.


---

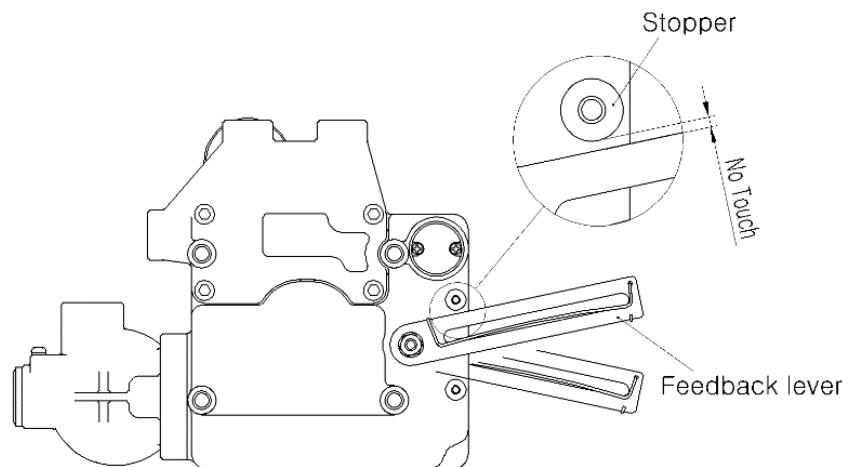

<TS600L Feedback lever should not touch lever stopper>

### 3.3 TS600R Installation


TS600R Standard bracket (included with the positioner) contains two components. The bracket can be used for both fork lever and NAMUR lever type.

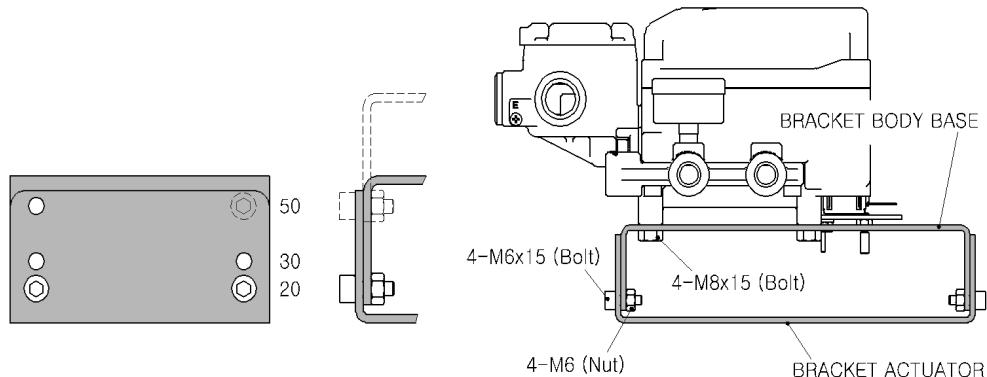

<TS600R Bracket Install Example>


#### 3.3.1 Fork Lever Type

Install the fork lever to actuator as shown below. Install the positioner feedback shaft and actuator spindle so that the concentrically layered.

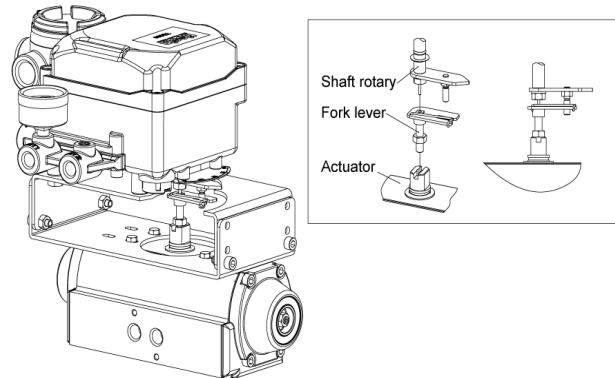

#### 3.3.2 NAMUR Type

Insert positioner feedback shaft and actuator spindle groove and tighten bracket.

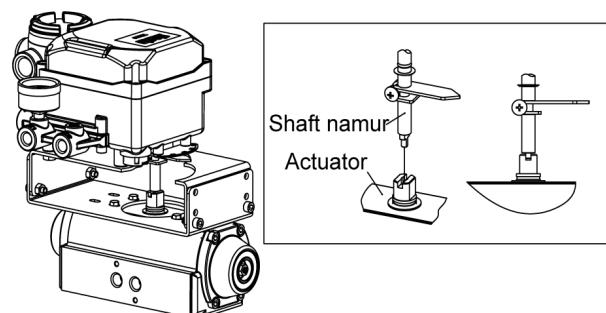

## 4 Air connection

### 4.1 Notice

---


 **NOTICE**

---


- TS600 Series is designed to increase the input current signal and OUT1 port pneumatic output increases.
- The products will be shipped RA (Reverse Action) that is when the input signal increases valves will be open.
- If you want to use DA (Direct Action), must replace the pipe, span and pipeline route.

---

### 4.2 TS600L air connection

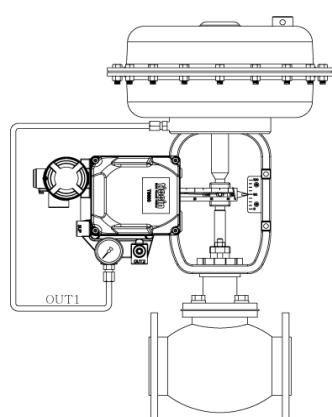


<TS600L Single actuator>

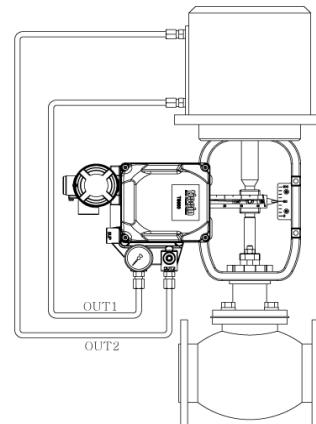


<TS600L Double actuator>

### 4.3 TS600L RA/DA action setting

For double acting, as shown below the piping connection and span position can be changed depends on RA/DA. The product is set to RA at factory.

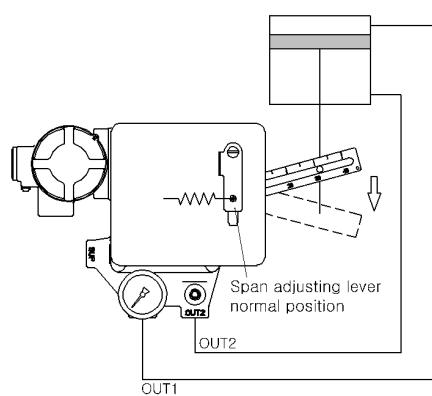


<Direct Action >

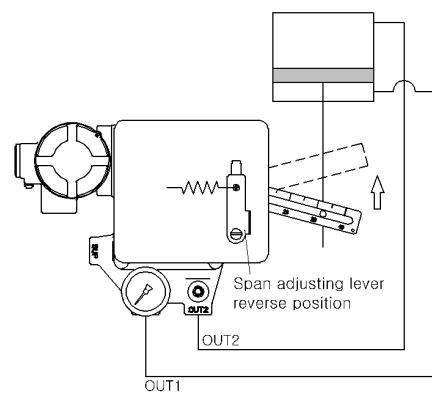


<Reverse Action>

#### 4.4 TS600R air connection

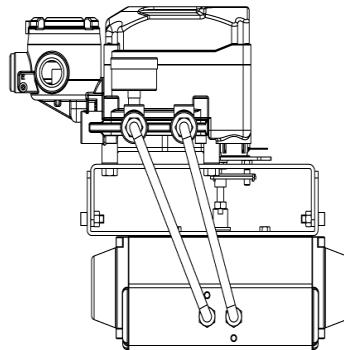


<TS600R Double type actuator >

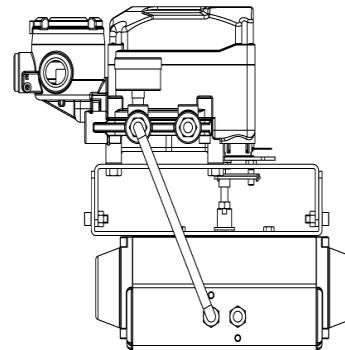


< TS600R Single actuator >

#### 4.5 TS600R RA/DA action setting

If the valve is used for DA (Direct Action), the input signal will be increased. If cam is rotated counter-clockwise, RA will face up to the side of the cam. If cam is rotated clockwise, the DA will face up to the side of the cam. The product is set to RA at factory.

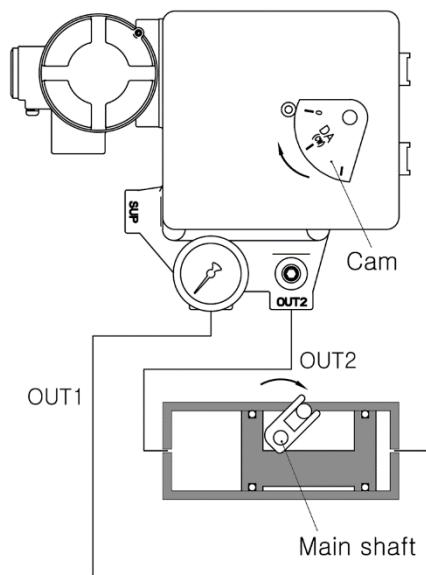

<DA Type>

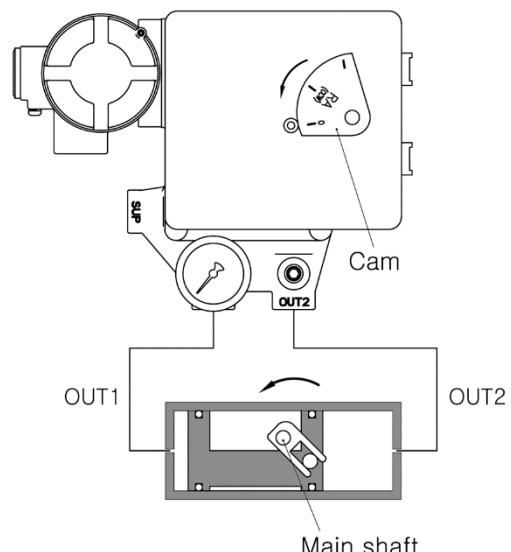

<RA Type>

## 5 Power Connection

---

### **WARNING**

---

- Always check that the electrical load is within the range stated on the nameplate. Failure to remain within electrical ratings may result in damage to or premature failure of the electrical switches, sensors or transmitter electronics.
- Check polarity of + and – exactly and connect wires.

---

### 5.1 Flame proof type power connection

---

### **WARNING**


---

- Be sure that exterior lead-in wiring to the terminal box is based on the guidelines for explosion-protection of manufactory electric equipment when being used as a flame proof, explosion proof construction.
- Do not remove terminal cover in a hazardous location while the power is on.
- Covers for the terminal and body should be in place while operating.

---


#### Cable Gland Connection

- ① Be sure to use the flameproof-approved wires and cable glands in the gas area or in the potentially-explosive area. Use the cables suitable for the diameter of the NBR packing when using the flameproof-approved cable glands.
- ② Insert the terminal connection into terminal box and lock completely.
- ③ Insert washer and rubber packing, and fasten the cable gland completely.

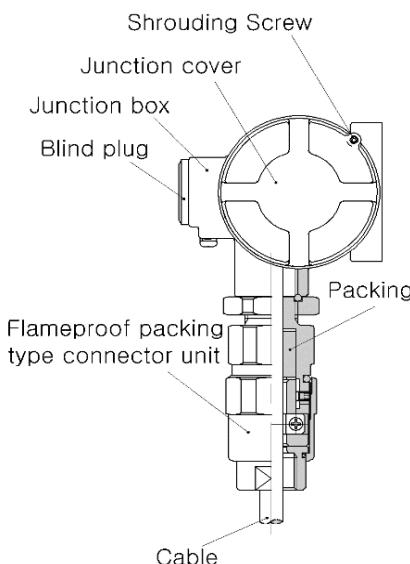

<Flame proof / ATEX & IECEx approved cable gland>

### Electrical Wiring

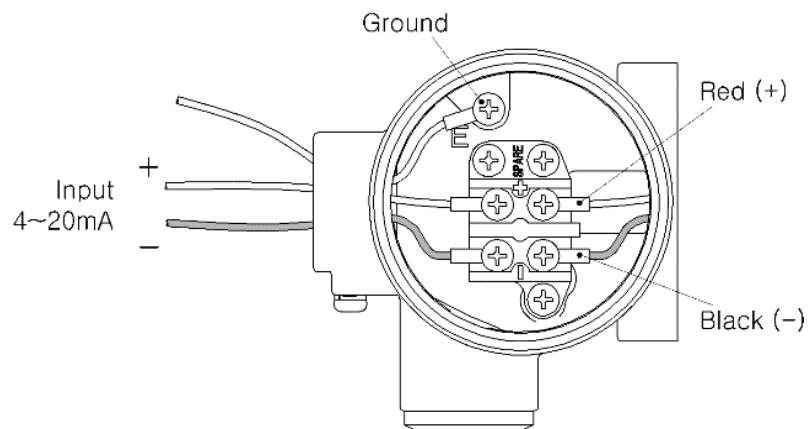

<Flame proof type / ATEX & IECEx type Terminal box>

- ① Open terminal box cover.
- ② Locate the poles and connect them properly.  
Make sure to fasten the connection.
- ③ Connect Ground cable.
- ④ Close back the terminal box cover

## 5.2 Intrinsically safe type power connection


### **WARNING**

TS600 series are designed under intrinsically safe procedures and restriction. However, intrinsically safe system can be damaged from electronic energies from other electronic devices. To avoid any system damages, please read the following.

- Differentiate intrinsically safe type circuit with other types of circuit clearly.
- Apply proper protection device to prevent static electricity.
- If possible, minimize the use of inductance and capacitance. If they must be used, set the devices at lower level than the maximum level.
- Protect the wires from damages.
- Grounding must be done properly according to the field's procedures.

### **Electrical Wiring**

- ① Open the terminal box cover by loosening the fixing bolt on the terminal box cover.
- ② Connect external + to internal + and external – to internal –.
- ③ Connect Ground Cable.
- ④ Close the terminal box cover and turn the fixing bolt completely.

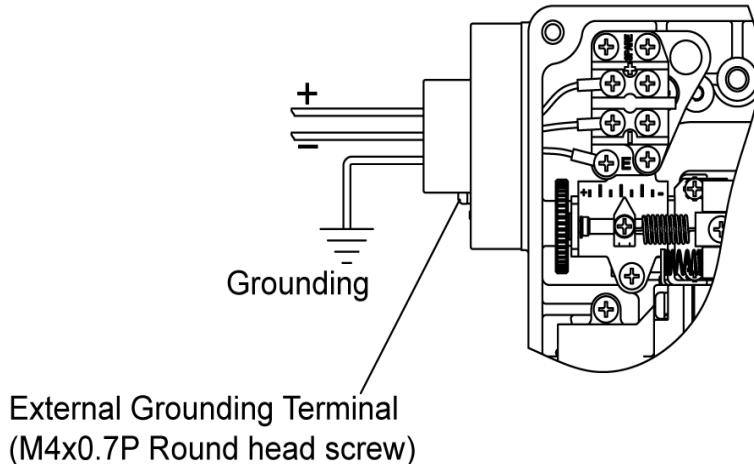


<Intrinsically safe type / Non-Explosion proof type Terminal box>

### 5.3 With Position transmitter

**CAUTION**


- Be sure to connect the feedback circuit to DC voltage 10~30V.
- Be sure to distinguish between the position of the current signal terminal and the position of the feedback signal terminal from the terminal block to connect (+) polarity and (-) polarity precisely.

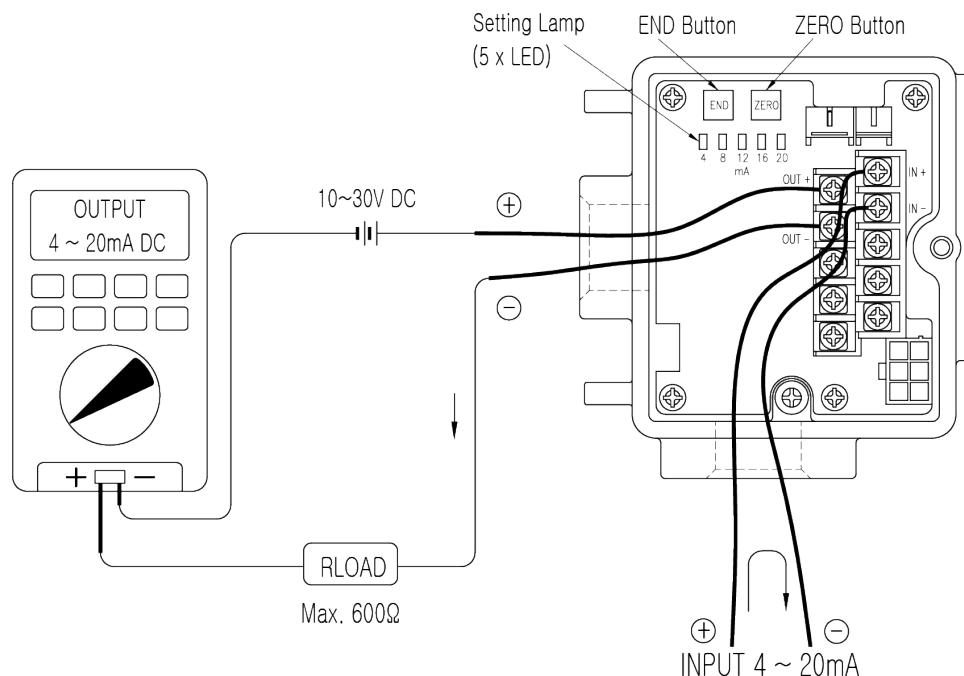


<With Position transmitter type Terminal box>

- ① Unlock the locking bolt of the terminal box and open the cover of the terminal box.
- ② Connect the electric wire (+) of the input signal to IN+ of the terminal block and connect the electric wire (-) to IN- of the terminal block.
- ③ Connect the electric wire (+) of the feedback signal to OUT+ of the terminal block and connect the electric wire (-) to OUT- of the terminal block.
- ④ Connect the ground to the ground terminal that is outside of the product.

## 5.4 With Limit switch

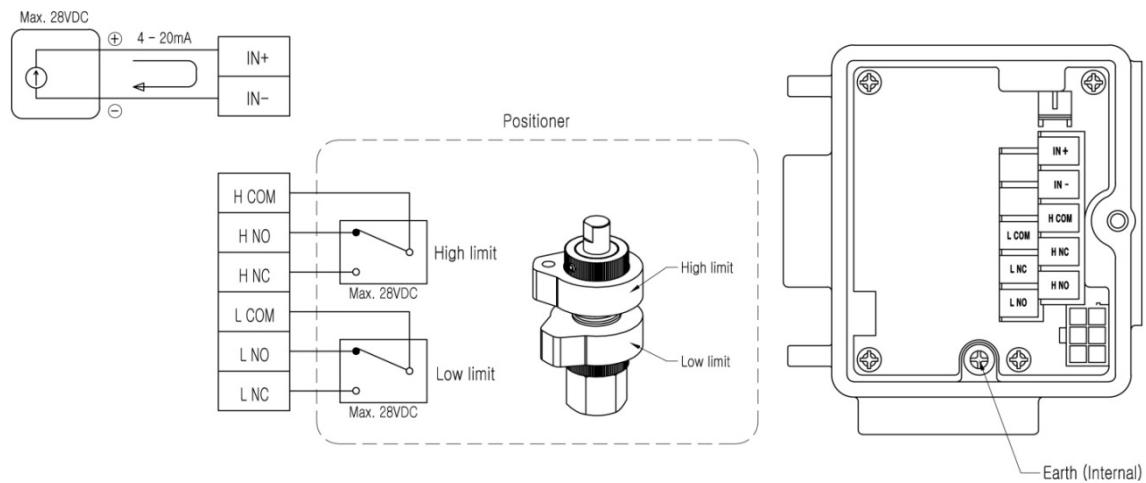

## 5.5 With Position transmitter and Limit switch

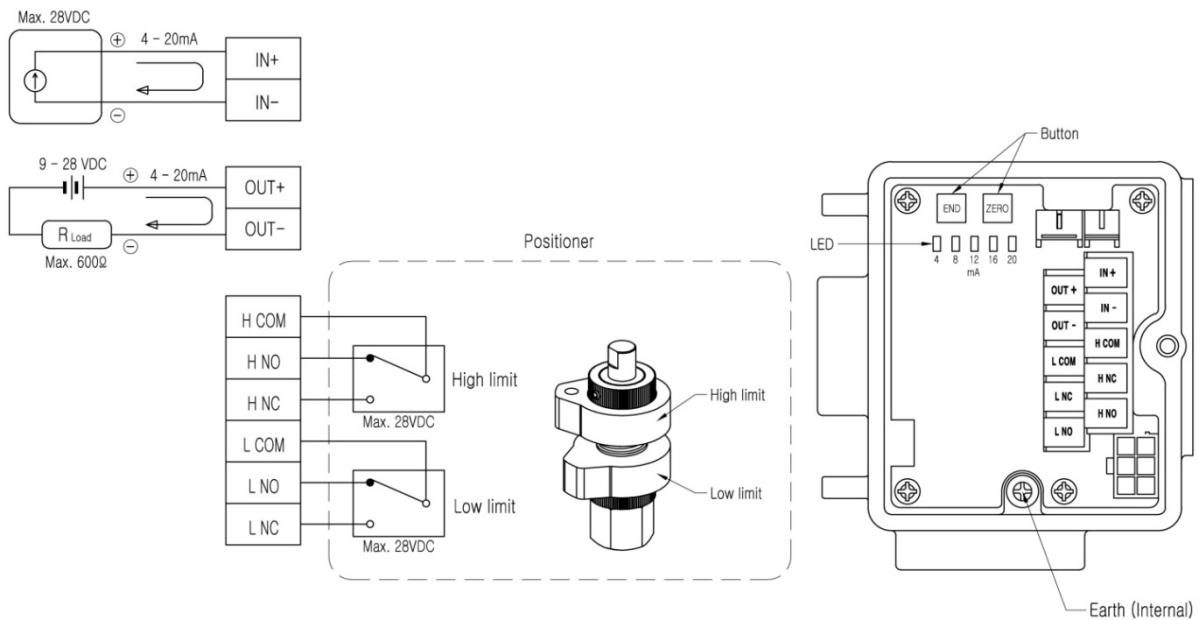

## 6 Adjustment

---

 **CAUTION**


---

Zero and span must be set correctly so product can be operated normally. If the setting is not correct, impact on performance like linearity. So please the zero and span position must be set correctly.

---

### 6.1 Zero and Span Adjustment

- ① Set the input current to 4mA and turn the zero adjusting screw by hand to set it to the actuator starting 0% point.
- ② Then, set the input current to 20mA DC and check the actuator stroke. At this point, depending on whether the span is too large or too small loosen the lock screw and then adjust the span as shown in the illustration above, set it to the actuator 100% end point.
- ③ It shall set the input current to 0% and conduct the zero point adjustment, as done in step1 again, because Span and zero point adjustment interfere in each other.
- ④ Repeat the above operations until the predetermined stroke of the actuator is obtained to the input current.

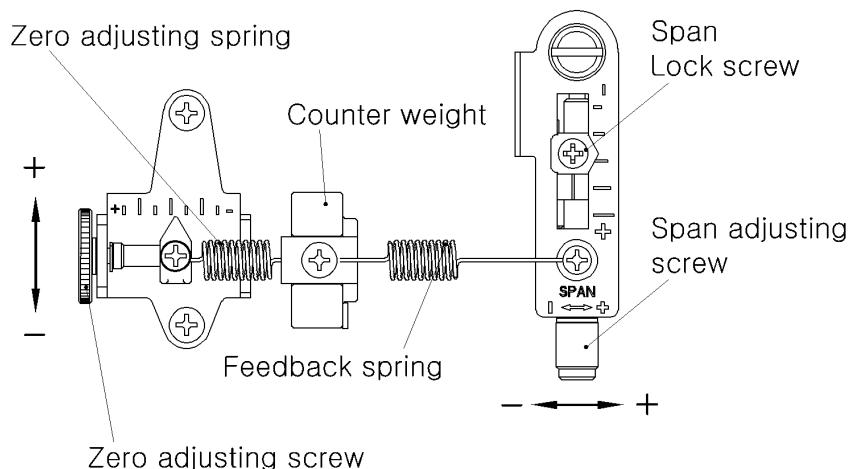

<Span and Zero structure>

## 6.2 Position transmitter Setting (Option)

For the general case, please set 2 points that belongs to from 0% position to 100% position of the valve. For more precise output, please set 5 points.

### ■ Output Settings

- RA setting : Input 4mA, output 4mA / Input 20mA, output 20mA
- DA setting : Input 4mA, output 20mA / Input 20mA, output 4mA

※ Factory setting : RA setting

### 2 Point Setting (RA)

- ① Input 4mA to make the valve stroke 0% and press ZERO button for 2 seconds. Then the lamps are turned on and off sequentially.  
※ If you want DA setting output :  
    Press END button for 2 seconds)
- ② Input 20mA to make the valve stroke 100% and press END button for 2 seconds.  
Then the lamps are turned on and off sequentially.  
※ If you want DA setting output :  
    Press ZERO button for 2 seconds)




### 5 Point Setting (RA)

- ① Input 4mA to make the valve stroke 0% and press ZERO and END buttons at the same time for 2 seconds. Then No.4 lamp blinks.  
※ If you want DA setting output :  
(1) Input 20mA to make the valve stroke 100% and press ZERO and END buttons at the same time for 2 seconds.  
(2) Please proceed ②~⑤ in order of 20mA, 16mA, 12mA, 8mA, 4mA.
- ② Press ZERO button. Then it saves output 4mA and it moves to No.8 lamp automatically and blinks.
- ③ Input 8mA to make the valve stroke 25% and press ZERO button. Then it saves output 8mA and it moves to No.12 lamp automatically and blinks.
- ④ In the same way, please set them in order of output 12mA, 16mA and 20mA according to each position of the valve 50%, 75% and 100%.
- ⑤ The lamps are turned off when the setting is complete.

## 7 Troubleshooting

### 7.1 Common problems

Failure	The valve is fully open regardless of the input signal
Causes	The hole of A / M switch of pilot valve is blocked by foreign matter such as dust
Corrective Action	As shown below, loosen the stopper screw and separate A / M switch and clean the bottom of the hole with 0.2mm drill or wire and re-fitted as original.

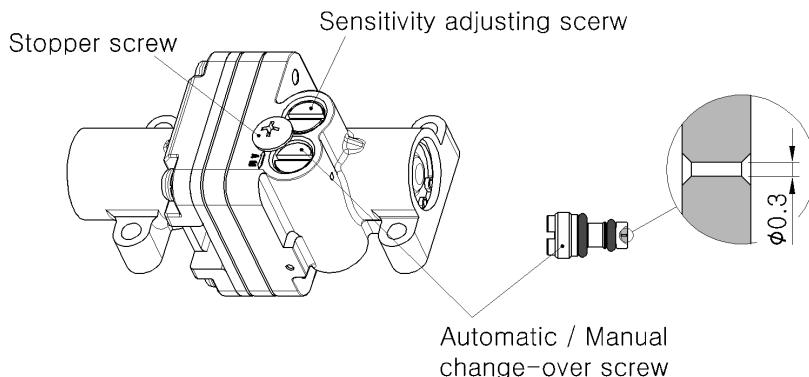


< A/M Switch Structure >

 **CAUTION**

The sensitivity adjustment screw is set optimally at the factory, do not adjust at random.

### 7.2 Install Orifice


Failure	When mounted on small size actuator (capacity less than 180cm <sup>3</sup> ) occurs hunting.
Causes	The pneumatic output of the positioner is too large compared to the actuator chamber size.
Corrective Action	As shown below, remove the O-Ring at OUT1 and OUT2 on the bottom of the pilot valve, please attach the bottom of the orifice included in the package.

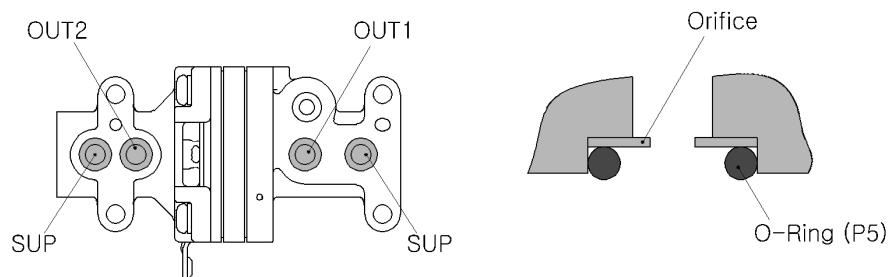


<Example of orifice installation>

### 7.3 Adjust Potentiometer gear

Phenomenon	Feedback signal dead zone
Cause	Potentiometer gear broke away by a strong shock or vibration.
Explanation	The white colored point of Mainshaft gear and the white colored point of Potentiometer gear should mesh.

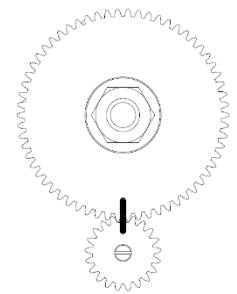


(Picture 1) Normal condition

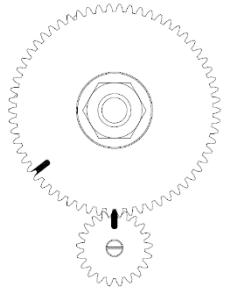

(Picture 2) Gear breaks away

#### How to adjust when the gear breaks away

- ① Please make the valve stroke on 0% and open the product cover.
- ② Loosen one of M3 fixing screws for Potentiometer. And also loosen the other screw just a little and then pull it down slightly, which can lead Potentiometer gear to separate from Mainshaft gear.
- ③ Adjust Potentiometer gear so that both white colored points should mesh.
- ④ After the adjustment is complete, fix Potentiometer with M3 screws.

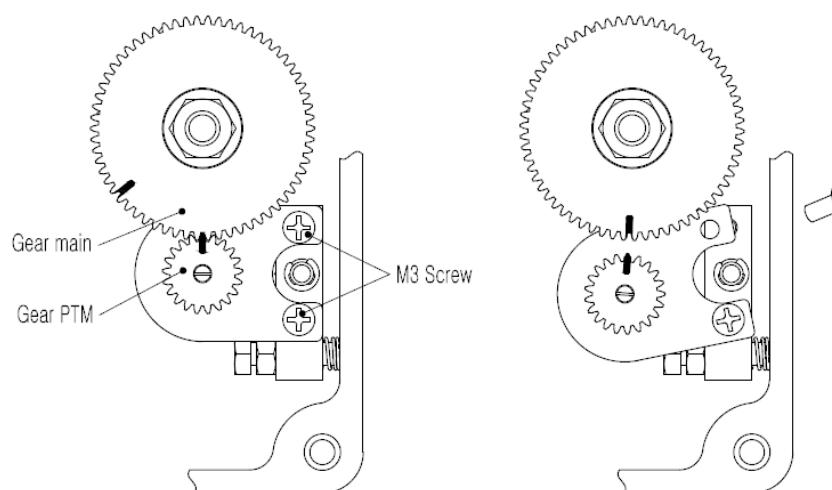

## 7.4 Other Problems and Resolution

### ☞ The positioner does not operate

Checklist	Causes	Corrective action	Reference page
If it does not work by moving the nozzle flapper	A/M switch is loose	Check to see if A/M switch is connected	31
	Nozzle clogged	Nozzle needs clean up	31
If it works by moving the nozzle flapper to the left and right	incorrect connections for input current	Check the wire connection	24~28

### ☞ The actuator works only with ON / OFF control but not intermediate control.

Checklist	Causes	Corrective action	Reference page
Linear type, check span mounting	Span is mounted upside down	Turn the span body	22
Rotary type, check cam mounting	Cam is mounted upside down	Mount the cam correctly	23
Check OUT1, OUT2 pipeline	OUT1 and OUT2 Pipelines are connected in opposite directions	Install pipeline correctly	22~23

### ☞ Hunting occurs

Checklist	Causes	Corrective action	Reference page
Hunting period is too short and the width is too large (pressure gauge moves at the same time of valve stem)	Actuator volume is too low	Install the orifice on the bottom part of the pilot	31
Hunting period is too long and the width is too small (Gauge markings move and valve stem slowly follow)	High temperature high pressure valve stem has a large frictional force	1 Perform a necessary action to minimize resistance of actuator or valve stem 2 Increase actuator size	N/A

### ☞ Linearity is too bad

Checklist	Causes	Corrective action	Reference page
Zero and span setting	zero and span setting is incorrect	Resetting zero and span	29
Check Input pressure is constant	Input pressure is not constant	Check the pressure relief valve on supply pressure is normal.	N/A
Verify lever installation	Lever does not provide optimum rotation angle	Adjust bracket and place drawbar on valve opening mark	21

### ☞ Hysteresis is too bad

Checklist	Causes	Corrective action	Reference page
Check connection of lever spring	Gap between the lever	Tighten the connection to remove the gap	19~21

## 8 Limited warranty and disclaimer

- The manufacturer warranty period of the product is 18 months after the product is shipped from Tissin in Korea.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Using the device in a manner that does not fall within the scope of its intended use, disregarding this manual, using under unqualified personnel, or making unauthorized alterations releases the manufacturer from liability for any resulting damage. This renders the manufacturer's warranty null and void.

## **Note**



## **Tissin Co.,Ltd.**

201-1105, No 397, Seokcheon-ro, Ojeong-gu,

Bucheon-Si, Gyeonggi-do, Korea 14449

Tel : +82-32-624-4573,

Fax : +82-32-624-4574

**[www.tissin.co.kr](http://www.tissin.co.kr)**